

YARNMASTER® 1N1 / 3N1

**Instruction Manual
Savio**

Loepfe Brothers Ltd.
Kastellstrasse 10
P. O. Box 582
8623 Wetzikon/Switzerland

Phone +41 43 488 11 11
Fax +41 43 488 11 00
E-Mail service@loepfe.com
Internet www.loepfe.com

YarnMaster® is a registered trademark of LOEPFE Brothers Ltd. for Switzerland and other countries.

All further company and product names are trading names or registered trademarks of the relative companies.

The content of this Operating Instruction is protected by copyright. All rights reserved. No part of this may be reproduced in whatever form (by printing, photocopying, microfilm or other) without a written grant of LOEPFE Brothers Ltd., nor may it be processed or distributed by any electronic mean.

Copyright© 2012 LOEPFE Brothers Ltd., Switzerland

08.2013 / Version 1.0.0

Table of Contents

General Information	7
Norms and Regulations	7
Instruction Manual	7
Liability	7
Safety Information	8
Warnings	8
General Safety Instructions	9
Yarn Clearing (General)	11
Definition of Yarn Faults	11
Yarn Fault Classification	13
Yarn Clearing	14
Foreign Matter (F)	15
Synthetic Foreign Matter (P)	15
Imperfections	15
Yarn Irregularities	15
Moiré	15
YarnMaster 1N1 / 3N1	16
Functional Range	16
Operating	17
Central Unit SCU	17
User Interface	17
Machine Overview	19
User Password	19
Data Entry	19
Settings Clearer Parameter / Start	20
Yarn Quality (Q) – 1N1/3N1	20
Lock Functions – 1N1/3N1	20
Foreign Matter (F) – only 3N1	21
Polypropylene (P) – only 3N1	21
Production, Lot Change	22
Light Tree	22
Styles	23

Machine Data	24
Status > Overview	24
Status > Clearer Data	25
Q-Pack	27
Hitlist	28
Exceptions	29
Reports	30
Base Setup	31
User Interface	31
System	31
Shifts	31
Checks and Maintenance	32
USB	32
Q-Sensor LED	34
Cleaning	35
Index Data Explanation	35
Spare Part Numbers	36
Replacements of Sensor and SE-Board	36
Diagnostics	36
Service	39
Machine Configuration	39
Versions	39
Snapshot	39
Technical Data (Changes reserved)	40
Parameter Settings	41

General Information

Norms and Regulations

The LOEPFE YarnMaster® 1N1 / 3N1 yarn clearing system is a product which has been inspected for technical safety. It complies with the following directives:

2006 / 42 / EC	Machinery Directive
2006 / 95 / EC	Low Voltage Directive
2004 / 108 / EC	Electromagnetic Compatibility

Instruction Manual

To prevent faults and operating errors, we recommend to carefully read this Instruction Manual and to carefully follow the instructions given.



The screen representations in this manual serve as illustration only. They should not be used as setting examples!

A copy of this Instruction Manual must be kept easily accessible near the machine.

Liability

The manufacturer assumes no liability for damage caused by:

- Noncompliance with the safety, operating and maintenance instructions contained in this Manual.
- The use of spare parts/non-OEM parts/conversion parts not supplied by us.
- Unauthorized conversion and modification of the yarn clearer.
- Normal wear.

Safety Information

Warnings

In these instruction, safety information is marked with symbols and signal words which point out the extent of the hazard.

The safety information has to be strictly observed to prevent accidents, personal injuries and damage to property.

Symbols



General hazard



Electrical hazard



Burn hazard



Flammable



Electrostatic-sensitive device



Property damage

Signal Words

DANGER

Indicates an imminently hazardous situation which will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which could result in death or serious injury

CAUTION

Indicates a potentially hazardous situation which may result in minor or moderate injury

NOTICE

Indicates a potentially hazardous situation which may result in damage to property.

Tips and Hints



Useful tips and recommendations

General Safety Instructions



CAUTION

Improper operation of the equipment could cause hazards!

This yarn clearing equipment must only be installed, commissioned and operated by authorized and trained personnel.



CAUTION

Risk of contamination, overheating, spark interference, fire!

This yarn clearing installation must only be operated with the covers closed.



DANGER

Risk of fatal injury from electric current!

Only perform maintenance work on electric components when these are switched off, disconnected from the mains and potential-free.



NOTICE

Electronic components and assemblies (printed circuit boards) are endangered by electrostatic charges!

Beware of touching the soldered connectors, pin contacts, printed circuits or electronic components before they have been discharged statically. Hold the units at the periphery only.



NOTICE:

Do not open any sensing head.

Yarn Clearing (General)

Definition of Yarn Faults

The Open End spinning process supplies a relatively uniform yarn. However, differences in yarn diameter cannot be completely avoided. Thus, it is first necessary to distinguish between normal yarn irregularities and actual yarn faults.

Yarn faults may be defined as yarn irregularities which can lead to difficulties in subsequent production stages or to faults in the end product. Yarn clearing is defined as the detection and elimination of yarn faults. This task is performed during the spinning process. Yarn clearers are, therefore, part of an Open End spinning machine.

To eliminate a fault it is necessary to interrupt the spinning process. The rotor must be stopped, the defect removed from the package and a new piecing cycle must be initiated. Obviously this interruption results in a loss of production. Yarn clearing is, therefore, always a compromise between quality and production, i.e. between the maximum possible number of yarn faults which could be removed and the least acceptable production loss. This compromise results in a distinction between:

- **Acceptable yarn faults**, namely those which are tolerated for sake of machine efficiency, and
- **Unacceptable yarn faults** (faults that cannot be tolerated)

Yarn Faults

Based on the average yarn diameter (basic diameter), the following yarn faults can be detected and cleared:

- **Thick and thin places** are defined, depending on whether there is an increase or a decrease in diameter.


Within the thick places further distinctions are made:

- **Neps**, as extremely short (up to a few mm) and extremely thick faults (several times the base diameter)

- **Faulty piecing**

Within the count deviation further distinctions are made

- **Thin and thick sliver** (short length)
- **Thin and thick count** (long length)

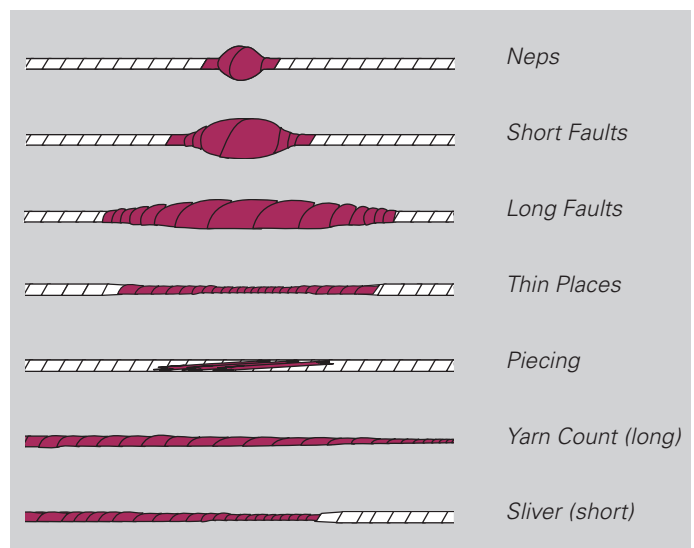



Accumulations of Faults (Moiré)

- Periodic defects (moiré)

Periodic defect where the period is related to the rotor diameter of the OE rotor. They can be caused by contaminated or used rotor

- Other periodic defects


They can be caused by defects or wear from components of the spinbox. These defects are detected by the spectrogram analysis.

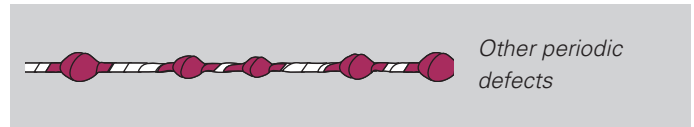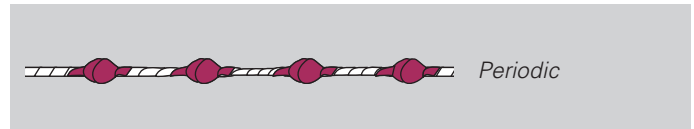

Yarn Irregularities (CV)

Disturbing diameter variations or sporadic irregularities, for example:


- Variation of yarn (CVy)
- Variation of hairiness (CVh)
- Variation of sliver (CVs)
- Imperfections (IPI)

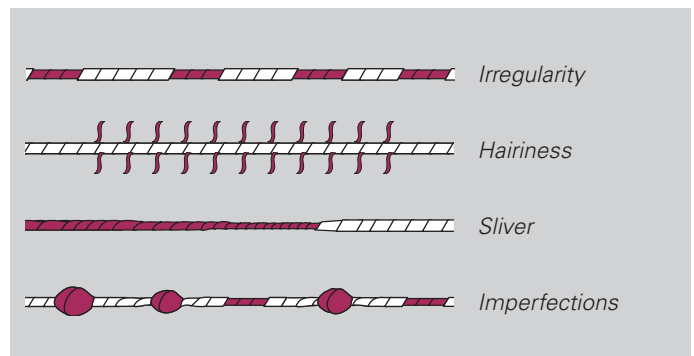

Foreign Matter (F)

Foreign matter with a color that is different from the base color of the yarn:


- Dark foreign matter in the raw yarn

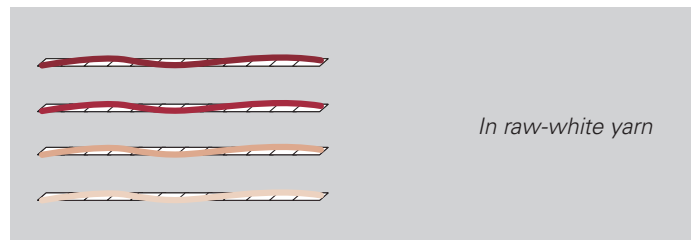

Synthetic Foreign Matter (P)

Synthetic foreign matter (e.g. polypropylene)

- Irrespective of the color of the yarn and the foreign matter, for example, white and transparent polypropylene in raw-white yarn

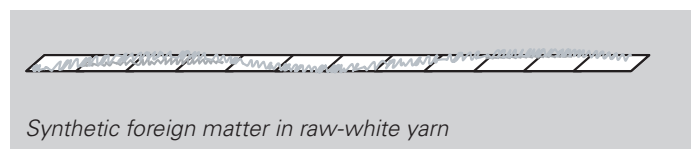

Yarn Fault Classification

Yarn faults are defined in terms of a transverse dimension and a longitudinal dimension. The transverse dimension is expressed as a deviation of normal diameter and the longitudinal dimension in millimeters.

The definition of yarn faults in terms of length and thickness suggests the representation of yarn faults in a Cartesian system of coordinates. Thereby the length is plotted in the horizontal direction (X-axis), and the thickness in the vertical direction (Y-axis). Each yarn fault can, thus, be plotted as a point in the plane of the coordinates. Furthermore, the plane of the coordinates can be divided into individual fields (classes) in order to summarize (classify) similar yarn irregularities into groups and to count them. This takes into account another extremely important point of view, namely the frequency of similar faults (see figure 1).

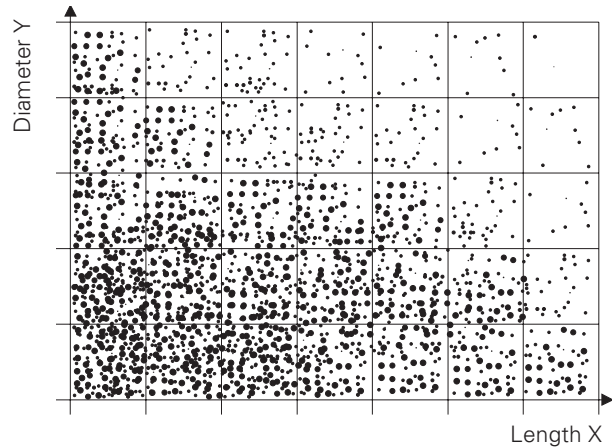


Figure 1

Frequency distribution of yarn faults in the coordinate grid

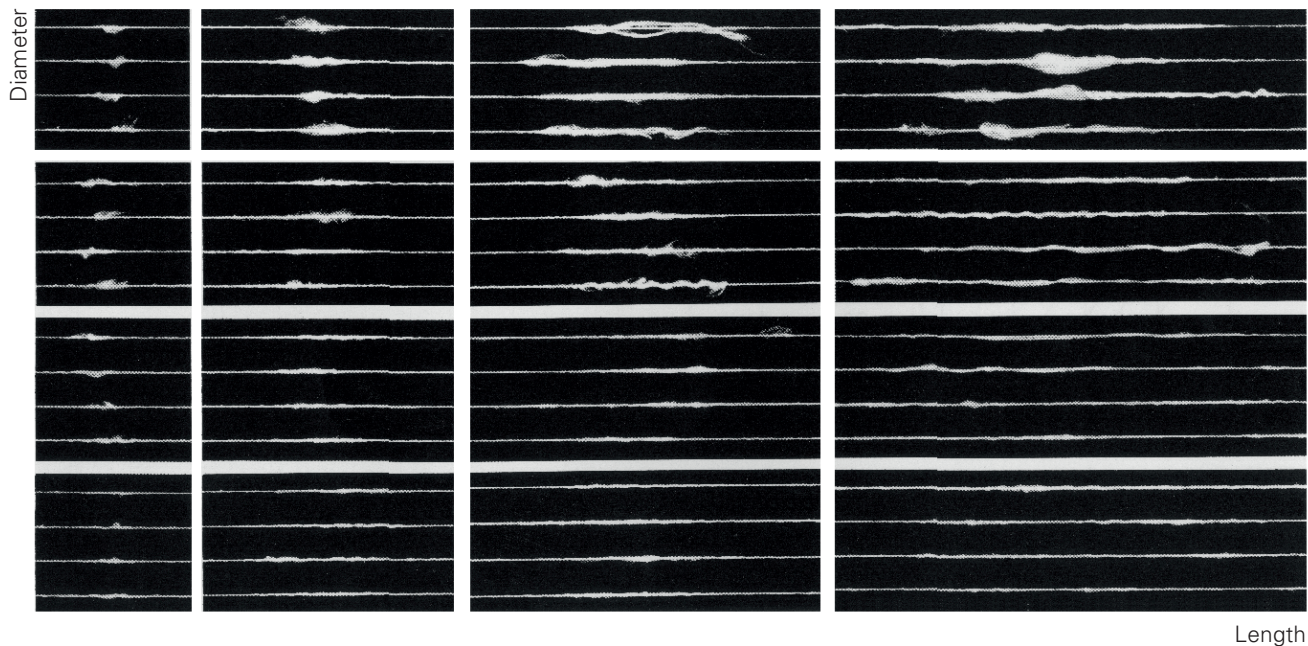


Figure 2

The choice of the class limits is largely random. Diameter faults are most frequently divided into different thickness and length classes (see figure 2).

The YarnMaster System 3N1 uses the following default classification (see figure 3).

4	10	20	40	80	160	320	mm	%
71	72	73	74	75	76	77	+	200
61	62	63	64	65	66	67	+	160
51	52	53	54	55	56	57	+	120
41	42	43	44	45	46	47	+	80
31	32	33	34	35	36	37	+	40
21	22	23	24	25	26	27	+	25
11	12	13	14	15	16	17	-	20
01	02	03	04	05	06	07	-	40

Figure 3

Yarn Clearing


Base Curve

The distinction between yarn faults which are to be cut out and those which are to be left in the yarn (unacceptable and acceptable yarn faults), which is made in the interest of Open End spinning efficiency, has already been pointed out. This distinction can be represented graphically on the plane of coordinates as a line which separates the acceptable faults (below) from the unacceptable ones (above). This line represents the **theoretically-desirable base curve (RG)**. A concave base curve (see figure 4) normally corresponds to the requirements in practice.

The concave shape arises from the textile evaluation, whereby the greater the deviation in diameter that is tolerated, the smaller the length deviation that appears acceptable. Furthermore, the base curve, thus, passes through fields of similar fault frequencies, which meets the requirement of high efficiency.

A distinction must be made between the theoretically-desirable base curve and the **practically-achievable quality settings**, which depends on the one hand on the clearing characteristic typical of a clearer type, and, on the other hand, on its setting flexibility.


Figure 4

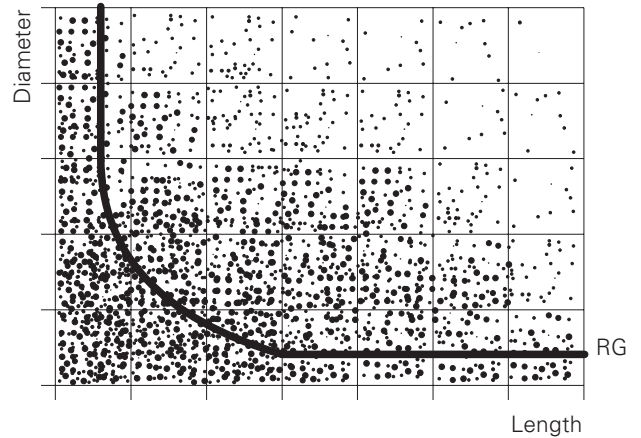

Clearer Characteristics

Matrix Clearing

Each time the detector sees a single diameter measurement that deviates for more than +25% or -20% from the reference mean value (this is the noise region of normal yarn irregularity!), this measurement is considered as the possible beginning of a yarn defect. Subsequent diameter samples are kept in memory until the yarn diameter is again between the noise region around the reference mean. At this time, the average defect diameter deviation and the defect length are calculated. One defect is then added to the count in the appropriate field of the 8x8 matrix, first column is not shown (contains NEPS). This classification matrix divides all defects into 8 diameter classes (2 for thin places; 6 for thick places) and 7 length classes. The class limits can be set freely by the user.

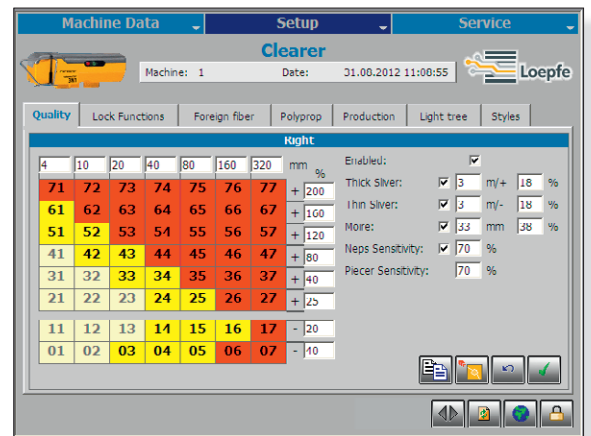

Piecing

Clearing according to the settings of the quality matrix allows for the creation of an optional piecing defect detection (depending on type of machine).

Foreign Matter (F)

The human eye is determining color differences by detecting differences in light absorption. The sensor for foreign matter incorporated in 3N1 is measuring these differences in light absorption to detect foreign matters in the yarn in a most effective way. Foreign matters are classified in a 7x8 matrix.

10	14	20	24	30	34	40	mm sd
71	72	73	74	75	76	77	45
61	62	63	64	65	66	67	31
51	52	53	54	55	56	57	25
41	42	43	44	45	46	47	21
31	32	33	34	35	36	37	19
21	22	23	24	25	26	27	17
11	12	13	14	15	16	17	16
01	02	03	04	05	06	07	4

Synthetic Foreign Matter (P)

The detection of synthetic foreign matter as polypropylene, polyamide (nylon) etc. is based on triboelectricity. The different electrical charging of materials (e.g. cotton and polypropylene) caused by travelling of the yarn over a detection element. The settings and classification can be displayed in a 7x8 matrix.

Triboelectric Effect

The triboelectric effect is an electrical phenomenon where certain materials become electrically charged after coming into contact with another different material. The polarity and strength of the charges produced differ according to material and surface smoothness. That means: The further the materials lie off each other in the series, the more definitely they can be detected.

Imperfections

Frequent yarn faults are described as Imperfections in the language of the textile industry. It is generally acknowledged that the shorter the fault length, or the smaller the diameter deviation respectively, the more frequent the event.

The source of these faults is found in the raw material or in a non-perfect spinning process. The raw material, card wires, opening rollers, rotor, navel have a significant influence on the imperfections.

With a reliable analysis of the Imperfections it is not only possible to optimize the production process but also conclusions can be drawn concerning the quality of the used fibre material.

Yarn Irregularities





The monitoring and evaluation of the surface structure of a yarn (e.g. hairiness), is a further important criterion for quality assurance. In order to predict yarn behavior during processing in weaving or knitting, it is not sufficient to simply consider individual quality characteristics (e.g. yarn irregularity) to assess a yarn. Only a combination of different quality criteria (e.g. hairiness and irregularity) supports making a definite conclusion.

Moiré

Moiré is a repetitive yarn defect caused by point contamination of the rotor's internal groove. Such contamination of the rotor produces thick places in the yarn with a distance to each other equal the rotor circumference.

Dry Human Hands, Skin	Acquires a more positive charge +
Leather	
Rabbit Fur	
Glass	
Human Hair	
Nylon (Polyamid)	
Wool	
Fur	
Lead	
Silk	
Aluminium	+
Paper	
Cotton	-
Steel	
Wood	
Amber	
Hard Rubber	
Nickel, Copper	
Brass, Silver	
Gold, Platinum	
Polyester	
Saran Wrap	
Polyacrylic	
Polyurethane	
Polyethylene (scotch tape)	
Polypropylene	

Triboelectric Series

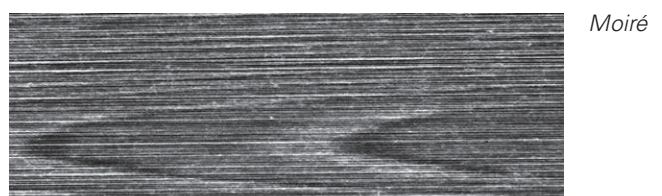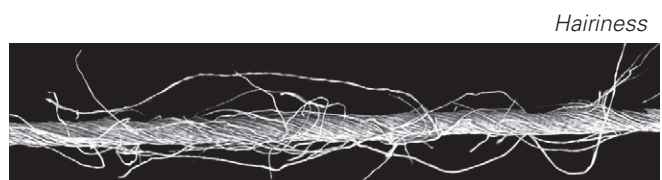

YarnMaster 1N1 / 3N1

Functional Range

		<p>P Clearing</p> <ul style="list-style-type: none"> - Clearing of synthetic foreign matter PP PE etc. - Matrix setting and classification - P cluster clearing
		<p>F Clearing</p> <ul style="list-style-type: none"> - Clearing of foreign matter - Matrix setting and classification - Foreign matter cluster clearing
		<p>Quality</p> <ul style="list-style-type: none"> - Clearing <ul style="list-style-type: none"> N Neps S Short Faults L Long faults T Thin places - Yarn count channel <ul style="list-style-type: none"> Thin and thick count - Sliver channel <ul style="list-style-type: none"> Thin and thick sliver - Moiré - Piecer clearing <ul style="list-style-type: none"> (depends on machine type) - Yarn irregularities CV% - Imperfections (IPI) - Classification of faults - Online laboratory Graphics (Q-Pack) <ul style="list-style-type: none"> Variation of yarn (CVy) Variation of hairiness (CVh) Variation of sliver (CVs)
<p>YARNMASTER 1N1</p>	<p>YARNMASTER 3N1</p>	



Operating

Important short names for the manual, used in the manual

- Q = Quality
- F = Foreign matter
- P = Polypropylene
- UI = User interface
- SCU = Sensor control unit
- SE = Section electronic
- SH = Sensing head

Central Unit SCU

A Touch Screen

The central unit is operated by direct inputs on the touch screen. Applying light pressure on the screen surface activates the functions shown.


Tap the menu item to be selected with the finger
Do not use a pointed, metallic object as this could damage the monitor surface!

Cleaning:

The monitor surface is made of plastic material. Clean the monitor with a soft cloth. Heavy soiling can be cleaned with a cloth moistened with a water and soap solution.

B USB Port

USB port to transfer reports and clearer data to a server and printer. The USB port is protected against dust and humidity by a removable cover.

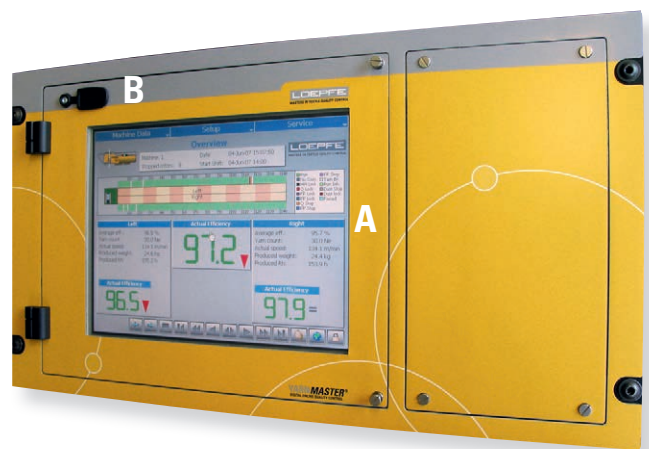

User Interface

1 Menu Bar (Overview Tabs)

Tapping the tabs in the header calls up the respective menus.


- Machine Data:** Shows all important data
- Setup:** Used for all kind of settings
- Service:** Used partly for one-time base settings and for service applications

2 Overview Page

Shows all data on a selected page. Depending on the page displayed, the settings can be entered or an overview of the data is possible.





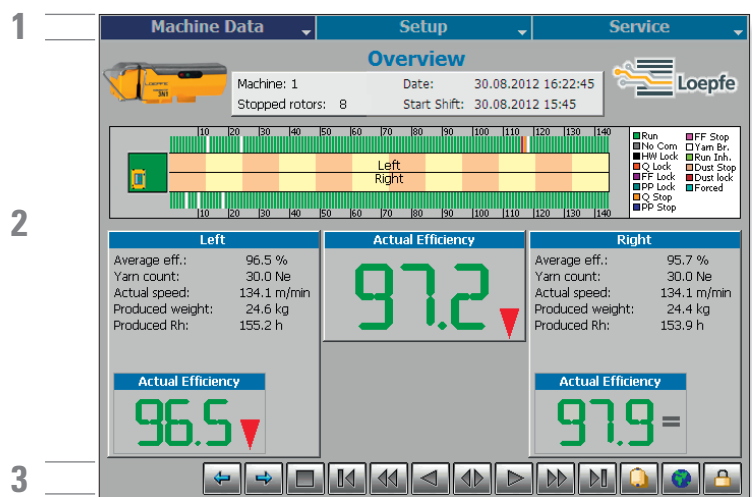






















3 Navigation Bar


Navigation buttons:
Enter a rotor number to display the rotors' related data.



3 Navigation

Pages can contain following buttons:

- 
 Next/previous page/list.
 Select next/previous option/value.
- 
 Enter rotor number.
- 
 First/last rotor of the selected machine side.
- 
 First/last rotor of the selected section.
- 
 Previous/next rotor. Keep touched for fast scrolling.
- 
 Switch machine side.
- 
 Deselect rotor.
- 
 Refresh the shown data.
 To remove this button from or to add it to each page: Setup > User Interface > General.
- 
 Change the user interface language.
 To remove this button from or to add it to each page: Setup > User Interface > Languages.
- 
 Lock/unlock data entry with a password.
 To remove this button from or to add it to each page: Setup > User Interface > Passwords.
- 
 Unlock technical alarm
- 
 Unlock hardware
- 
 Unlock rotor
- 
 Save a style setting with a style name to the SCU / load a style setting to a machine side
- 
 Save reports or styles to USB / load styles from USB to SCU
- 
 Snapshot of the SCU including all values: Service > Diagnostics
- 
 Warm restart
- 
 Cold restart / reboot the SCU
- 
 Touch the cleaning button before cleaning the touch screen.
 To remove this button from or to add it to each page: Setup > User Interface > General.
- 
 Sort the list.
- 
 Scroll the list.
- 
 Replace the settings by the default settings. Touch  to apply the default settings.
- 
 Undo changes.
- 
 Cancel the changes.
- 
 Save the entered data (all changes need to be confirmed).
- 
 Clear list/report.

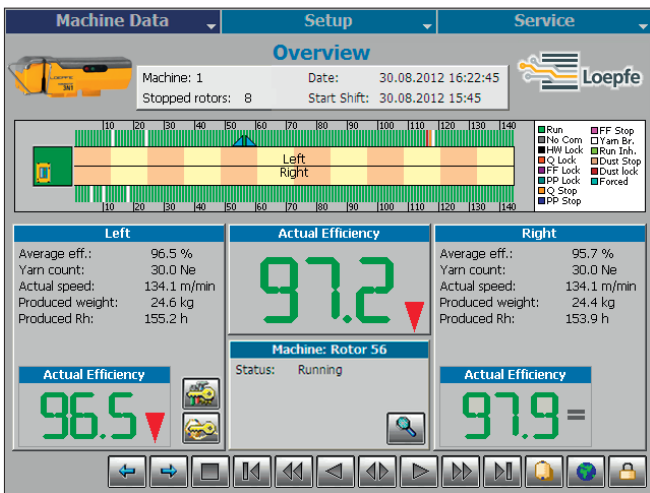

Machine Overview

The header contains:

- Machine number
- Date and time
- Number of stopped rotors
- Shift start date and time

The machine block shows you the state of each particular rotor (see caption below).

Information about the total efficiency and production data on both sides. For more information see chapter Machine Data / Status / Overview.



Overview shows the data for the entire machine or for one side.

Color	Status
■	Running
■	No communication
■	Hardware locks, forced lock
■	Quality locks
■	Foreign matter locks
■	Polyprop locks
■	Quality stops

Color	Status
■	Foreign matter stops
■	Polyprop stops
■	Yarn broken
■	Run + inhibit
■	Dust stops
■	Dust locks
■	Forced stop

Rotor Status Color Codes

The Rotor status color gives the information about the condition of each rotor.



User Password

Default: 123

Enter the password and confirm.

The Password can be changed individually: Setup > User Interface > Passwords


Qualified personnel can touch the lock button and enter the service password.

Change to capital letters and alternative characters with Cap button.



Data Entry

Data entry needs to be confirmed twice, once in the data entry window and once in the corresponding main window. The left side shows the selected parameter and the possible limit range for the parameter.

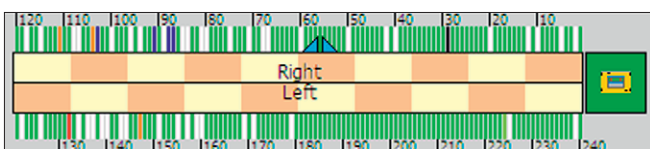

The indicator in the machine block shows the selected rotor.

Settings Clearer Parameter / Start


Activate the different yarn clearer functions by ticking the box next to the specific clearer channels.

The major clearer channels can be set by the selection of classes of within the clearer matrix through the touch screen. Each class is limited by a length and deviation limit which both can be set individually within certain limits.

A red class is activated for clearing, a yellow one can get selected in addition. The light yellow classes are disabled by the system.

The additional clearer channels can be set by entering a setting within the certain limits.


The range for all settings can be found in chapter Technical Data / Parameter Settings, but the range will also be shown on the SCU when you change a setting.

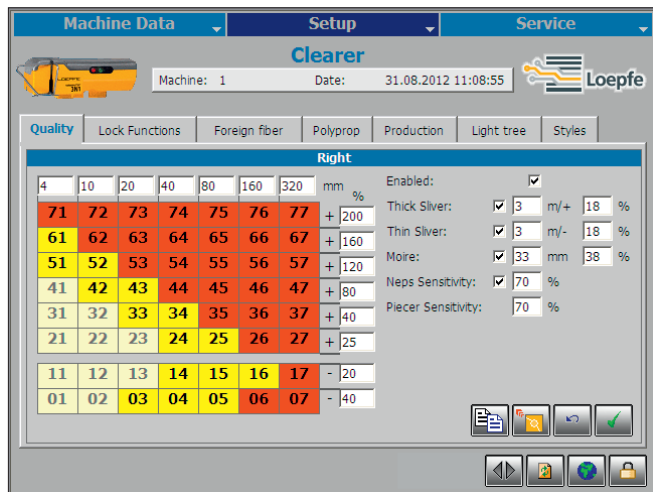

Yarn Quality (Q) – 1N1/3N1

The yarn clearing to control the yarn structure gets activated by setting classes within the clearer matrix. The length and deviation limits of the classes can be set individually within certain limits.

- Thin and thick sliver for detection of misplaced cans or partly decreasing/increasing of the sliver diameter
- Moire: Length of the fault depending on rotor diameter
- Neps sensitivity: length generally 5mm, deviation selectable
- Piecer sensitivity deviation selectable (% of general clearing during piecing)

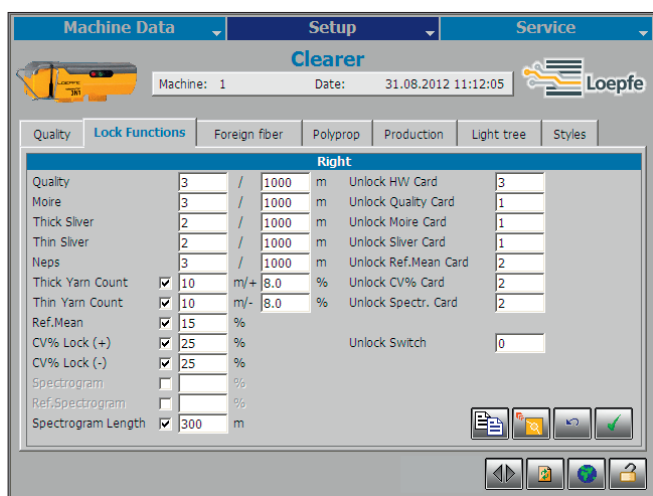

Lock Functions – 1N1/3N1


The lock functions are used to block particular rotors that have repetitive quality stops or longer defects which can not be removed by the piecer.

All lock functions can be enabled or disabled by setting of a tick in the box next to the lock function.

The blocked spindles need to be unlocked before the start again. This can be done with the SCU, the button on the sensing head, or the unlock cards.

The unlock card level can be set to three different levels. Each level can be unlocked by the unlock card of the same level or higher.


- Quality, Moire and Thin/Thick Sliver lock: Locks particular rotors to repeated Q stops within the set length.
- Thick/Thin Yarn Count: Long diameter deviation. Rotor get locked to remove the defect manually.
- Reference Mean: Rotor gets locked when the reference mean increases or decreases more than the set percentage from the average of the machine side. Check the sensor, yarn, sliver, etc.
- CV% Lock: Relative deviation from the median per side CV%. Rotor get locked to remove the defect manually.
- Spectrogram/Ref. Spectrogram: Locks particular rotor if the spectrogram changes more than the set limit for the set length, or deviates from the referenced machine side.
- Unlock switch: Set the unlock level of the button on sensing head.

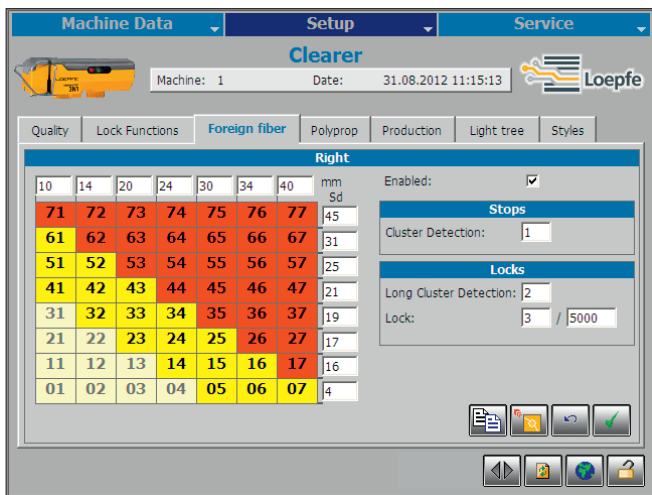

Foreign Matter (F) – only 3N1

The foreign matter clearing gets activated by setting classes within the clearer matrix. The length and deviation limits of the classes can be set individually within certain limits.


- Cluster: sensitivity for short cluster (possible to remove during piecing)
- Long cluster: sensitivity for long cluster (Locks cannot be removed during piecing. They must be removed manually).
- Lock: repeated F stops within the set length. In case of a lock check the sliver for contaminations and remove the yarn from the package.
- The sensitivity can be set form 1 to 9. Setting 1 is the most sensitive. Choose 9 if you do not want to use the foreign matter cluster.

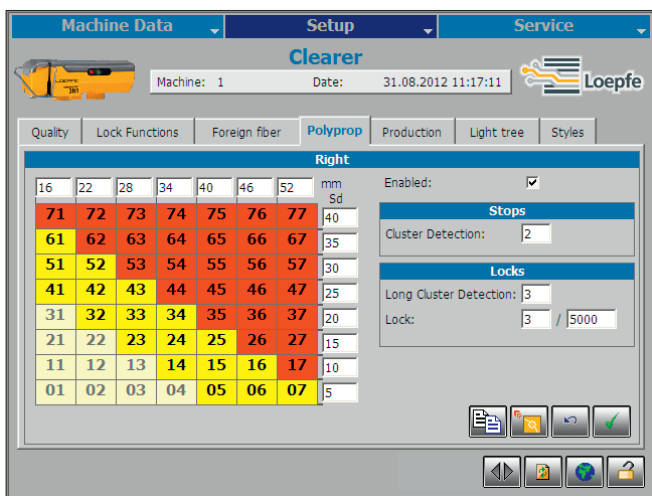

Polypropylene (P) – only 3N1

The polypropylene clearing gets activated by setting classes within the clearer matrix. The length and deviation limits of the classes can be set individually within certain limits.

- Cluster: sensitivity for short cluster (possible to remove during piecing)
- Long cluster: sensitivity for long cluster (Locks cannot be removed during piecing. They must be removed manually).
- Lock: repeated P stops within the set length. In case of a lock check the sliver for contaminations and remove the yarn from the package.
- The sensitivity can be set form 1 to 9. Setting 1 is the most sensitive. Choose 9 if you do not want to use the polypropylene cluster.

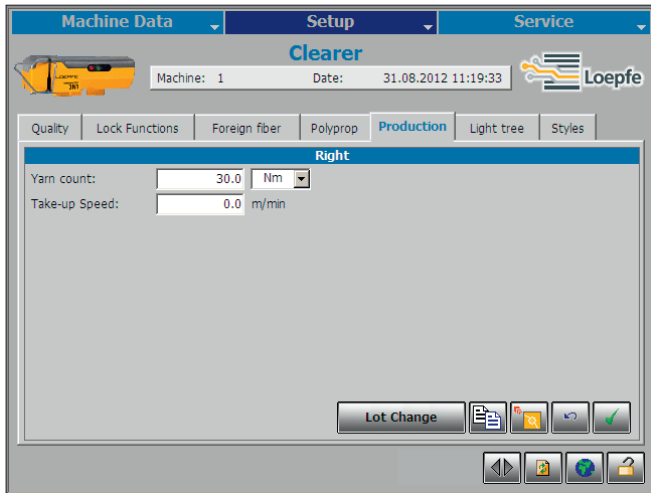

Production, Lot Change


Enter the yarn count and choose between Ne, Nm, tex, Nc. Take-up speed is set on the machine side.

Attention: initiate a lot change:

- After changing yarn count
- After changing Lot
- After each change of spinning parameter on the machine
- After each change of take-up speed
- After interruption for more than 24 hours



Any Lot change forces a shift change for both machine sides.

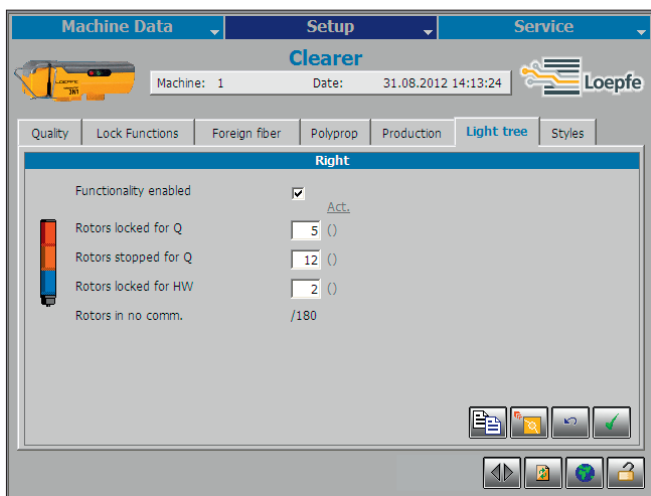

Light Tree

Functionality and Priority of Lamp Tree


The parameters can be set for the left or right side independently.

The light tree function can be activated by setting the tick into the box next *Functionality enabled*.

- RED light: # of Rotors locked for Q (Yarn quality locks by clearer)
- ORANGE light: # of Rotors stopped for Q (Yarn quality stops by clearer)
- BLUE light: # of Rotors locked for Technical Alarm (HW) (Rotors locked by clearer)
- Additional information: Rotors in no comm. → number of rotors / rotors that are off-line

When multiple situations occur simultaneously, only the lamp with the highest priority will be lit.

The quality locks (RED) have the highest priority, followed by the quality stops (ORANGE) and finally the technical alarms (BLUE).

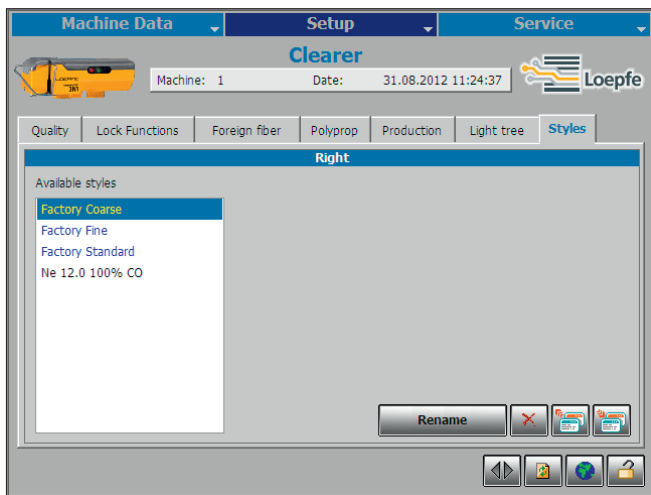

Styles

The active clearer and production settings can be saved on the SCU as a style under an individual style name.


- Save style button to save the settings of a machine side under a style name
- Load style button to load the specific setting to a machine side

The styles can also be saved to or loaded from a USB stick.

- Save to USB button
- Load from USB button

Machine Data

Status > Overview

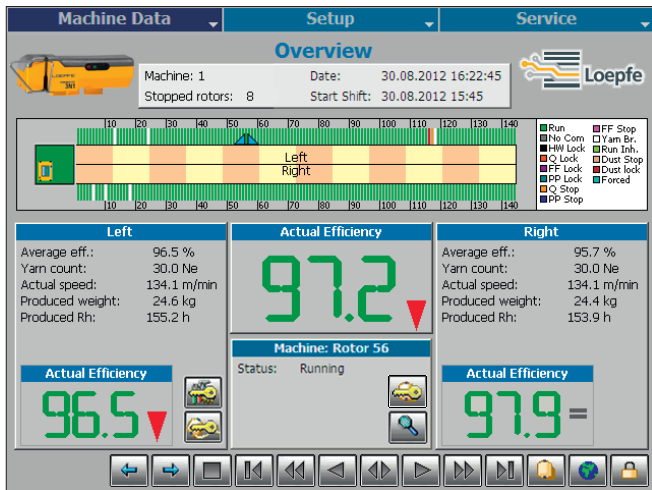

The Overview is the main screen and shows all the important data.

The machine block shows the state of each particular rotor.

Information about the total efficiency and production data on both sides and major information as:

Efficiency:

▼ : decreasing

▲ : increasing

▬ : Stable

The value is red, if the efficiency is below the target efficiency. This target efficiency can be set in Setup / User Interface / Overview.

Production weight: of the machine (from shift start)

Produced Rh: Rotor hours of the machine (from shift start)




With next or rotor button you can navigate to particular Rotor.



With the stop button you just go back to the whole machine.



With the lens you can navigate to the production data of the selected rotor (as chapter Machine Data / Status / Clearer Data).



Show you a technical or hardware alarm per machine side. You can also unlock the machine sides with this buttons.



With this button you can unlock a specific rotor.

Status > Clearer Data



The following production data are possible to see for each side / machine and for each rotor (more information in chapter Checks and Maintenance / Index Data Explanation).

	1	2	3	4
Ref.Mean (mm):	0.39	0.39	(239 R)	
Act.Mean (mm):	0.41	0.40	(174 R)	
Dust (mm):	0.03	0.04	(19 R)	
CV%:	12.2	12.1	(238 R)	
IPI Neps/km:	200	214	(237 R)	
IPI Thicks/km:	62	66	(236 R)	
IPI Thins/km:	8	9	(28 R)	
Thicks/100m:	1545	1650	(238 R)	
Thins/100m:	754	752	(238 R)	

Chart on the left side (for all Clearer Data):

1. Value description
2. Values of selected rotor
3. Mean value: Machine/Machine side
4. Number of rotors for the corresponding mean calculation

Machine Data | Setup | Service

Clearer data

Machine: 8 | Date: 30.08.2012 16:28:32
 Data: Actual Data | Start Shift: 30.08.2012 15:45

Quality | Foreign fiber | Polyprop | Stops & Locks | Plicings

Left

Stopped rotors: 68
 Sample length: 2021 km
 Average eff.: 76.8 %
 Produced weight: 1429.4 kg
 Produced Rh: 2218.0 h

	4	10	20	40	80	160	320	mm	%
	0	0	0	0	0	0	0	0	+200
	2	0	0	0	0	0	0	0	+160
	89	2	0	0	0	0	0	0	+120
	7577	91	2	0	0	1	0	0	+80
	*****	13909	295	14	0	0	0	0	+40
	*****	2426	44	3	0	0	0	0	+25
	*****	47761	1251	121	20	0	0	0	-20
	133	30	6	11	0	0	0	0	-40

Absolute:
 /1000 Rh: 5.1
 /1000 km: 0.9
 /100 kg: 4.7

Quality > Machine / Machine Side

- Stopped rotor: total stops
- Sample length: since shift start
- Average eff.: of the machine (from shift start)
- Production weight: of the machine (from shift start)
- Produced Rh: Rotor hours of the machine (from shift start)

Quality > Rotor

- Sample Length: of the rotor
- Efficiency of the rotor
- Status: current state of the rotor

Machine Data | Setup | Service

Clearer data

Machine: 8 | Date: 30.08.2012 16:28:32
 Data: Shift - 1 | Start Shift: 30.08.2012 15:45
 End Shift: 31.08.2012 08:45

Quality | Foreign fiber | Polyprop | Stops & Locks | Plicings

Left

Stopped rotors: 25
 Sample length: 16188 km

	10	14	20	24	30	34	40	mm	Sd
	9	0	0	0	0	0	0	0	45
	0	0	1	0	0	0	0	0	31
	16	18	9	0	0	0	0	0	29
	82	28	6	2	1	1	1	1	21
	66	28	5	0	0	1	0	0	19
	113	38	9	12	1	0	0	0	17
	852	220	50	37	24	4	11	11	13
	24195	4547	706	399	112	89	110	110	9

F_LGT_F_127 F_129 F_LCK_F_130


Absolute:
 59
 /1000 Rh: 32.3
 /1000 km: 3.7
 /100 kg: 3.7

Foreign Matter > Machine / Machine Side

- Stopped rotor: total stops
- Sample length: since shift start

Foreign Matter > Rotor

- Sample length: of the rotor
- Status: current state of the rotor

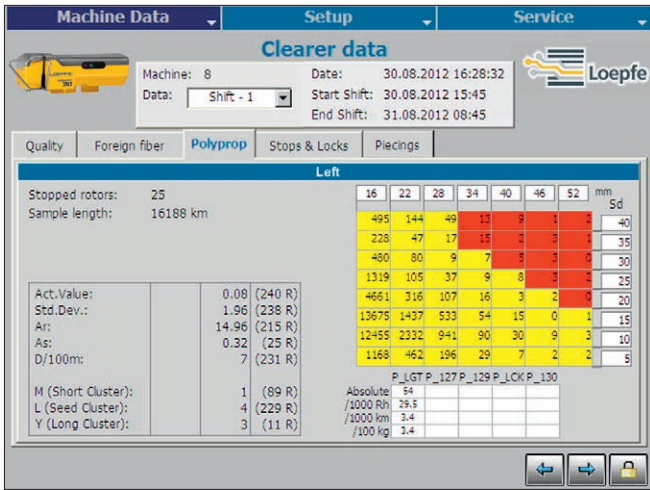


Polypropylene > Machine/Machine Side

Stopped rotor: total all stops
 Sample length: since shift start


Polypropylene > Rotor

Sample length: of the rotor
 Status: current state of the rotor

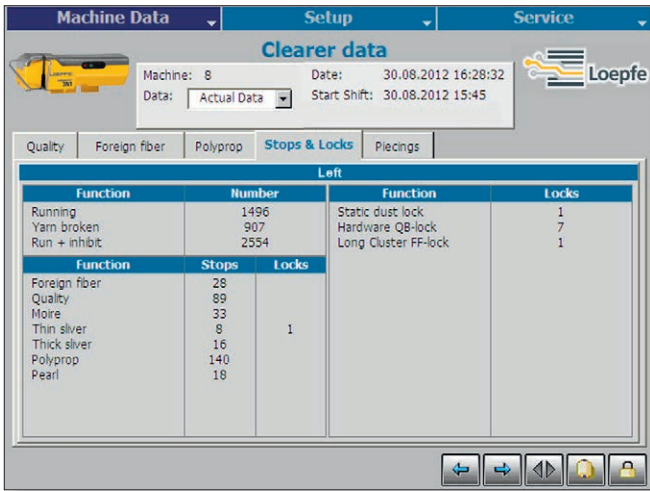

Stops and Locks

1. Amount of the particular state since shift start
2. Quality generally: amount of the particular state since shift start
3. HW/Dust Lock: amount of the particular state since shift start (depends on machine type)

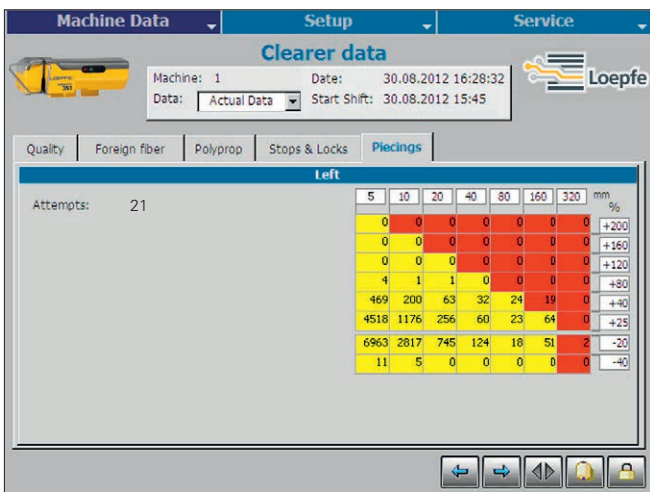

Piecings

Reports the classification of all faulty attempts during the piecing phase.

Q-Pack

Real time Online Laboratory for advanced analysis.

Spectrogram

Helps to analyze the yarn diameter profile for the presence of periodically occurring deviations.

Sample: needed length for a picture of the spectrogram


Mean: reference mean

CVh = CV% hairiness (CV% on 2mm)

CVy = CV% yarn (CV% on 8mm)


CVs = CV% sliver (CV% on 500mm)

y-axis: relative % to the max. amplitude

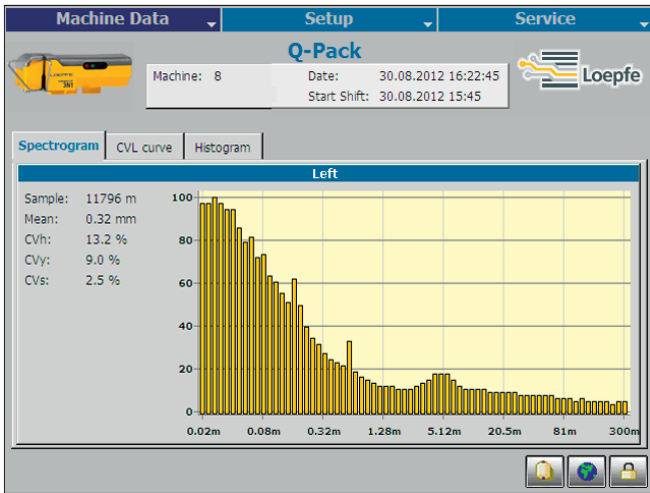

CVL Curve


Analysis the CV% of a certain length.

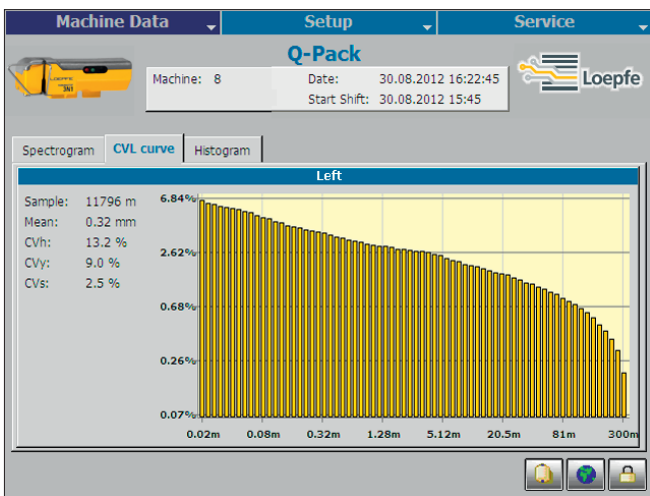

Histogram

x-axis: +/-x/100 mm

y-axis: relative % to maximum value

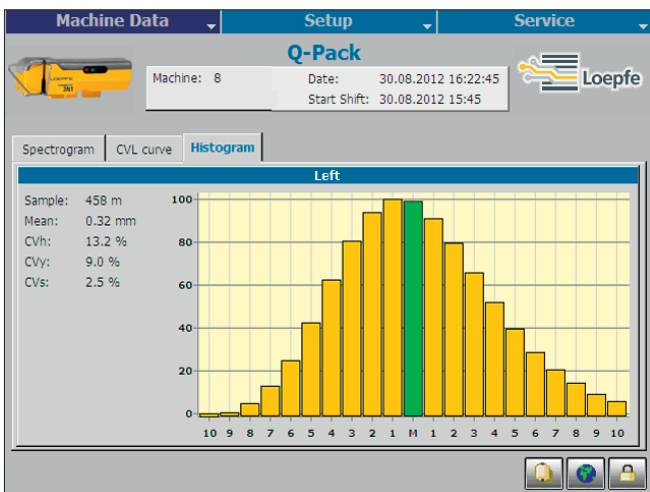

Left															
Reference Mean	76	91	107	99	105	31	2	10	95	197	19	213	100	120	12
Actual Mean	146	125	17	158	184	66	74	113	175	47	116	13	126	43	31
Dust Value	43	158	66	125	146	181	183	157	74	79	65	85	96	110	122
CV%	158	104	180	66	184	182	96	189	79	18	181	45	87	14	25
Thicks/100m	167	80	37	153	39	52	89	191	172	38	111	186	108	75	58
Thins/100m	38	167	24	162	43	36	125	39	83	80	153	109	52	75	137
IPI Neps/km	18	25	3	195	204	8	37	16	79	62	102	111	12	165	198
IPI Thicks/km	167	43	36	38	153	80	137	53	81	63	75	52	157	39	24
IPI Thins/km	158	66	194	11	175	107	126	110	182	112	106	96	13	125	104
Efficiency	105	93	81	140	138	17	23	1	100	28	43	11	159	104	14
No production															

Hitlist

Quality

Displays the rotors with the highest or lowest measured or calculated values for Q.



Choose + for the highest values



Choose - for the lowest values

Left															
Actual Value	157	186	74	50	62	2	107	24	168	194	67	171	161	128	29
Std. Dev.	122	115	22	12	17	20	11	16	18	24	112	9	114	111	120
Ar	167	147	29	169	213	21	8	127	203	204	92	36	20	6	183
As	56	146	32	188	12	120	193	216							
D/100m	152	126	149	173	176	74	40	169	154	187	194	212	85	64	104
S/100m	89	84	158	183	187	213	27	44	11	2	55	17	100	49	82
M (Short Cluster):	58	91	136	180	196	210	11	14	15	17	21	26	27	29	30
L (Seed Cluster):	76	196	91	92	163	136	58	10	87	153	37	26	174	72	155
Y (Long Cluster):	89	86	46	5	51	52	55	59	61	64	70	75	84	42	26

Foreign Matter

Displays the rotors with the highest or lowest measured or calculated F values.

A = variance of the signal for the displayed rotors

D = classified defects

S = short defects

M (Short Cluster): short cluster accumulating (chain)

L (Seed Cluster): short cluster accumulating (distributed)

Y (Long Cluster): long cluster accumulating

(Displays the counted too, even if cluster settings are not active)

Left															
Actual Value	94	162	31	11	184	132	93	148	103	68	20	194	9	101	69
Std. Dev.	167	8	6	61	193	12	10	200	201	3	204	36	163	35	37
Ar	22	124	180	5	155	176	142	160	189	208	214	132	110	170	85
As	12	199	81	146	157	120	1	125	188	193	138	216	43	105	56
D/100m	210	114	105	76	66	185	108	128	15	60	123	19	129	107	111
M (Short Cluster):	13	20	32	42	48	55	60	66	74	84	102	124	130	151	162
L (Seed Cluster):	129	15	108	151	211	91	61	37	117	120	42	76	14	77	132
Y (Long Cluster):	7	10	15	16	27	32	33	44	46	52	55	62	64	91	102

Polypropylene

Displays the rotors with the highest or lowest measured or calculated P values.

A = variance of the signal for the displayed rotors

D = classified defects

S = short defects

M (Short Cluster): short cluster accumulating (chain)

L (Seed Cluster): short cluster accumulating (distributed)

Y (Long Cluster): long cluster accumulating

(Displays the counted too, even if cluster settings are not active)

Exceptions

The exception menu gives you an overview on all rotors with an exceptional behavior for the actual and last two shifts. This information can help to determine problems in your spinning environment when they start.

The screenshot shows the 'Exceptions' window for Machine 1. The data is as follows:

Rotor	S	L	T	M	V+	V-	FF	PP	Other stops	Other locks
11										1
28			3				4			1
72										1
138							1			1
140				1	1	1				1
158										1

Exceptions by Type

Shows the rotors which are above the set filter values (default 5 stops and 1 lock).

A higher stop rate with the same defect, can give a short figure about the conditions of the related spinning component or the used slivers.

The screenshot shows the 'Exceptions Summary' window for Machine 8. The 'Dust lock : 10 Rotors' table is as follows:

	88	71	82	95	114	116	135	196
	202	224						

Exceptions Summary

The summary shows the number of rotors which were in a certain state. The summary depends on the limits set.

The column on the left side shows you a total number of rotors which reached a certain state.


By choosing a specific state the rotor numbers will occur in the right box.

The screenshot shows the 'Exceptions Hitlist' window for Machine 1. The data is as follows:

Exception Type	Count	Rotors
Shorts	200	20 28 31 39 43 49 52 56 68 73 82 84 85 90
Longs	138	158 211 167 17 72 188 201 63 140 174 74 81 83 85
Thicks	11	140 138 93 161 127 76 81 71 183 201
Moire	58	158
Thick Sliver	79	111 43 47 65 66 17 38 140 153 191 208 216
Thin Sliver	93	140
Foreign fiber	175	23 53 88 21 57 66 76 84 29 96 101 124 138 141
Polyprop	39	
Other Stops	15	110
Other Locks	11	23 72 138 140

Exceptions Hitlist

The hitlist shows the rotors with the most or lowest stops. Detailed data can be checked in the menu Machine Data / Status/Clearer Data by selecting the rotor number.

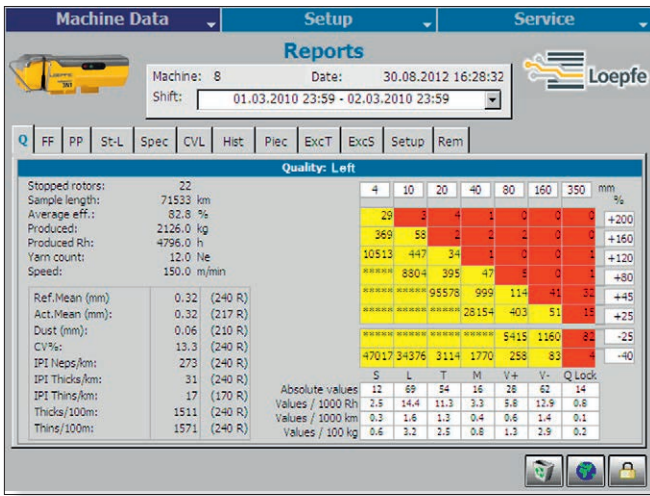

Reports

All important data such as machine data and setup can be displayed as a report per machine side.

Each lot or shift change ends the data collection for a report and starts a new report.



The completed report will be saved as html-file with the start and end data and time in the file name.

It is possible to save up to the past 100 shifts on the SCU. Default setting is the 20 (see chapter Base Setup / Shifts).


Once the maximum amount of reports is reached each new report will replace the oldest one.




Reports can be stored via USB
(See chapter Checks and Maintenance/USB)

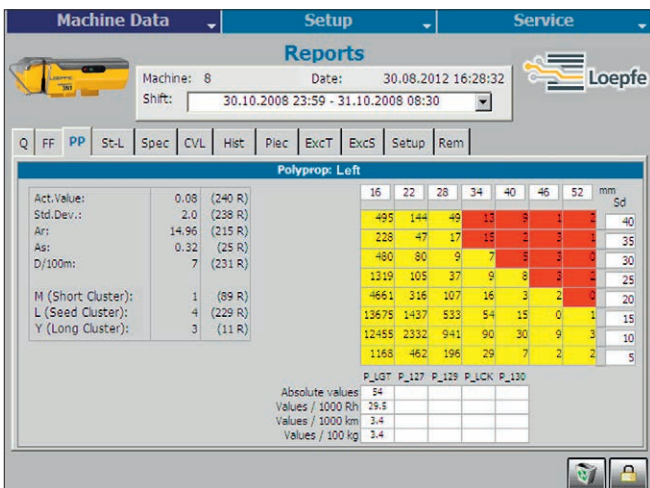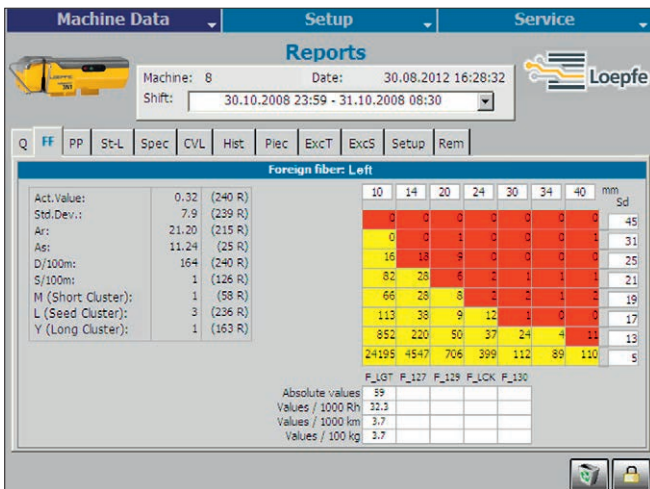


Base Setup User Interface

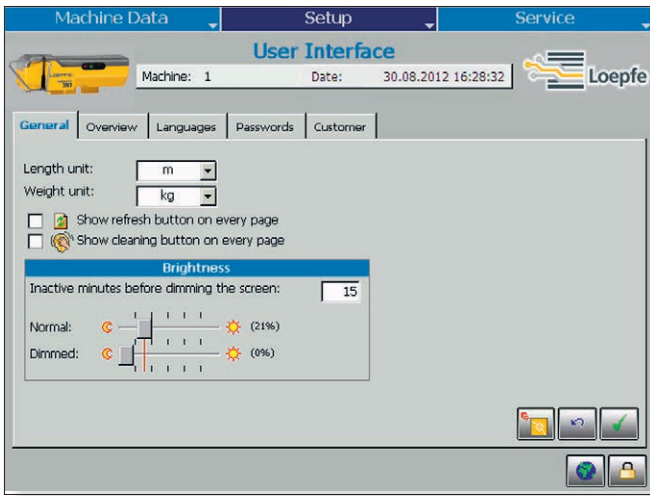

- General: Set the measurement units and display options
- Overview: Customize the Overview
- Languages: Choose the user language
- Password: Change the User password
- Customer: Customize the display logo

 **UI Settings can be saved on USB**
(See chapter Checks and Maintenance/USB)


System

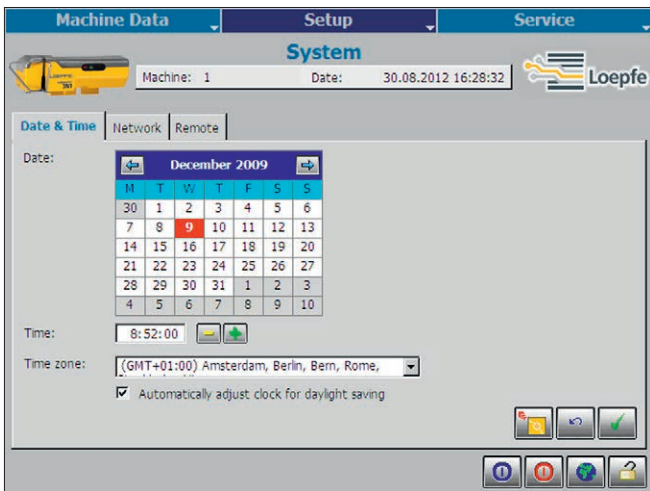

Configure the system

- Region: set the local Date/Time Zone
- Network: set the IP address to use the SCU browser (Change IP will force an auto warm start)
- Remote: enter the license key for the (optional) SCU browser

Shifts

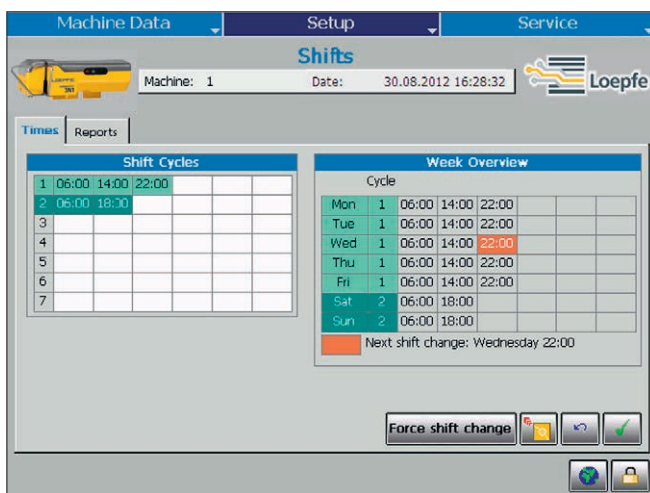

Times: Define up to seven different shift cycles. For a non-working day, do not enter time.

Select a shift cycle for each day of the week.

Reports: Number of reports to be kept in memory. Once the maximum number of report is reached, each new report replaces the oldest.


Checks and Maintenance

USB

USB Stick

On the front of the SCU, a USB port is available to save shift reports, styles, settings logs and snapshots. The styles and settings can also get imported by another SCU.

It is also used to upgrade the SCU software.

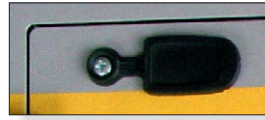

Procedure:

1. Open the cover of the USB port.
2. Plug the USB stick in.
3. Wait until one or two USB buttons are added to the button bar in the lower part of the display. This may take 10 seconds. If no buttons appear, the USB stick cannot be used in this page.

Function:



Save data to the USB stick.



Read data from the USB stick. This button only appears when the USB stick contains data that correspond with the current page.




Make a snapshot (See chapter Service / Snapshots).



NOTICE: Do not remove the USB stick while data transfer is busy. Wait for the confirmation message. After removing the USB stick, close the cover.


Folder Structure

All files are stored in the OpenEnd folder. This folder contains a subfolder for each machine, called "Mach" followed by the machine number.

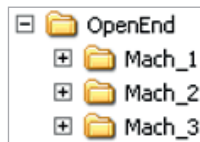

Shift Reports

To save shift reports on the USB stick, first open the Report page. Then touch  to save the data. This will save all tabbed pages of the shift report.

- First, check the file formats to be saved (XML, HTML).
- Set the time frame of shifts you want to save by selecting a start and end date and confirm with .
- To save all shift reports, touch All.

A confirmation message will be displayed when the reports are saved to the USB stick. Confirm.

The file ShiftReports_<yymmdd>_<yymmdd>.zip is saved and contains:

- One or more files Shift_<yymmdd>_<hhmm>_<yymmdd>_<hhmm>.htm or Shift_<yymmdd>_<hhmm>_<yymmdd>_<hhmm>.xml (the filename includes the shift start/end date/time)

Read Stored Shift Reports

Store the saved zip-file on your PC. Place it into you existing reports folder ore create a new one.

Unzip the file into the folder. You will receive two new folders.


ShiftReports_yymmdd_yymmdd_html.zip (contains the shift reports)


ShiftReports_Common.zip (contains the visualization file)



Unzip both files into the same folder. Now you will have the single reports in html formate. You can open them with a common browser (IE, Firefox).

Settings

Settings can be transferred from one machine to another.





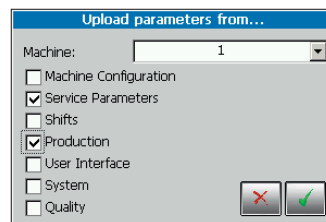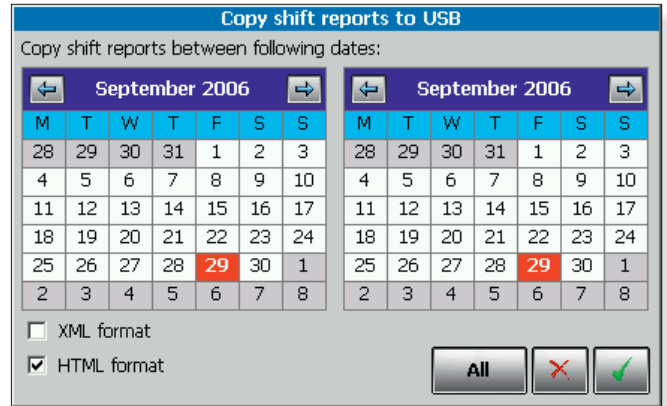
































By touching  in a settings page, all settings are downloaded to the USB stick: file Parameters_<machine number>.xml. A progress bar will be displayed while the settings are downloaded.

By touching  in a settings page, settings can be uploaded from the USB stick. Select the machine and which settings have to be copied to the SCU and confirm. A progress bar will be displayed while the settings are uploaded.



Q-Sensor LED

During normal operation, the red LED is off and the green LED blinks shortly. If there is a quality or other problem, the way the LEDs light up or flash indicates the kind of lock, stop or problem. Check the Machine overview page for details.

Sensing Head LEDs	Status and Color	Descriptions	Unlock Method	
			Button	Card
 Green running light  Red off (normal operation)	Run  Lime green	Yarn running	—	—
	Yarn br.  White	Yarn broken		
	Run inh.  Green yellow	Piecing in progress (run inhibit)		
	Q stop  Orange	Q stop		
	F stop  Fuchsia	Stop: F_LNG, F_127, F_129		
	P stop  Blue	Stop: P_LNG, P_127, P_129		
 Green slow blink  Red fast blink	Q stop  Orange	Piecer quality stop	This status disappears on run inhibit.	
 Green on  Red off	Q lock  Red	Ref. mean lock	 (rotor)	Ref. Mean
 Green slow blink  Red off	Q lock  Red	Thin/thick yarn count lock	 (rotor)	Ref. Mean
 Green fast blink  Red off	Q lock  Red	Thin/thick sliver lock	 (yarn)	Sliver
 Green off  Red on	Q lock  Red	Quality lock & Pearl lock	 (yarn)	Quality
	F lock  Purple	F cluster lock long: F_130, F_LCK	 (yarn)	F
 Green off  Red fast blink	Q lock  Red	Moiré lock	 (yarn)	Moiré
 Green on  Red slow blink	F lock  Purple	F lock	 (yarn)	F
	P lock  Teal	P lock	 (yarn)	P
 Green on  Red fast blink	Q lock  Red	CV% lock	 (rotor)	CV%
	Q lock  Red	IPI neps/thin/thick lock	 (yarn)	CV%
 Green fast blink  Red on	Q lock  Red	Spectrogram alarm lock & Remote spectrogram lock	 (rotor)	Spectr.
 Green on  Red on	Dust lock  Brown	Dynamic/static dust lock	Clean sensing head	
 Green fast blink  Red fast blink	Forced  Cyan	Forced stop	This status disappears on run inhibit.	
	HW lock  Black	Can't stop lock, Forced locks & Hardware lock	 (hardware)	HW
 Green off  Red off	No comm.  Gray	No communication, unlock, new mean	Consult technician.	

Cleaning

When?

Clean the measuring slot of the Q-sensor regularly, for example at lot change. This will reduce dust locks. Always clean when a rotor is stopped for dust lock (both sensor LEDs on).

With?


Use only the cleaning swab from LOEPFLE (part no. 16964900). Use it either dry or dampened with optical lens cleaner.



Do not immerse the sensing head in cleaning agent!



Do not spray the cleaning agent directly in the optical system!



Do not use any hard/sharp objects!



NOTICE:

A damage of the optics due to wrong cleaning cannot be accepted as a guarantee issue!

How?

Drag the soft tip of the cleaning stick a few times through the measuring slot. When the LEDs go out automatically after removing the cleaning stick, the sensor is cleaned well.

Index Data Explanation

Q

Ref.Mean (mm): Reference mean value from adjust at the lot start or from a forced mean by the user. Measurement absolute in mm.

Act. Mean (mm): current mean in real time

Dust (mm): contamination of the Sensor (according to the empty and clean optic)

CV%: statistic calculation

IPI Neps/km: 2-4mm, +50% diameter deviation

IPI Thicks/km: 20-40mm, +30% diameter deviation

IPI Thins/km: 20-40mm, -30% diameter deviation

Thicks/100m: generally classified

Thins/100m: generally classified

S: stops short fault up to 80mm

L: stops long starts from 80mm

T: stops thin

M: stops Moiré

V+: stops thick sliver

V-: stops thin sliver

Q-Lock: Quality lock

F

Act. Value: Reference mean value from adjust at the lot start or from a forced mean by the user.

Std.Dev.: Standard deviation

A: variance of the actual value

Ar: variance running

As: variance stopped

D/100m: classified defects (matrix)

S/100m: short (up to 80mm)

M (short cluster): short cluster accumulating (chain)

L (seed cluster): short cluster accumulating (distributed)

Y (long cluster): long cluster accumulating

F_LGT: F matrix stop

F_127: chain of short F Cluster stop

F_129: distributed short F cluster stop

F_LCK: F Lock

F_130: long F Cluster stop

P

Act. Value: Reference mean value from adjust at the lot start or from a forced mean by the user.

Std.Dev.: Standard deviation

A: variance of the actual value

Ar: variance running

As: variance stopped

D/100m: classified defects (matrix)

M (short cluster): short cluster accumulating (chain)

L (seed cluster): short cluster accumulating (distributed)

Y (long cluster): long cluster accumulating

P_LGT: P matrix stop

P_127 chain of short P Cluster stop

P_129: distributed short P cluster stop

P_LCK: P Lock

P_130: long P cluster stop

Replacements of Sensor and SE-Board

Replacement of the SH and its cables is possible while the machine is running. Just unplug the cables. For any case of defective parts or malfunction please contact customer support.



For all other changes you need to unplug the power for the according part. After changing the SE board, please check the software version on menu Service/Version. There should be one line with SE (1-n) as shown on manual page 39, Service/Version.

Spare Part Numbers

Loepfe Part Number	Description
16964900	Cleaning Tips
280066600	SCU FRS 3000 Basic
280066300	SCU FRS 3000 Full
905268110	SE board FRS 3000 Basic
701000000	extension print for SE (Full Version)
90526410	SH FRS 3000 Basic

Loepfe Part Number	Description
905264000	SH FRS 3000 Full
V314103	Fuse for SCU
80992900	Fuse for SE
P222004	Battery for SCU
16957900	Battery for SE
45757000	USB Stick Loepfe

Diagnostics

Events


The events list shows a summary of all stops of either the machine, the machine side or a particular rotor.

The event data contains:

- Rotor
- Date
- Time
- Stop reason (state)





Use the filter for particular events

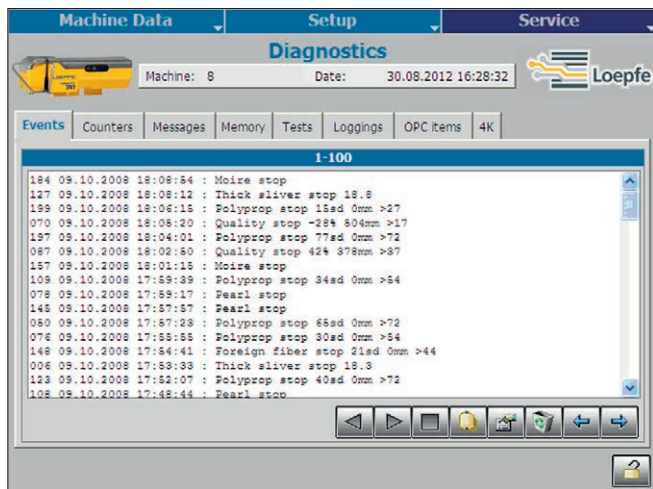

Filter Function as:

- Hardware
- Quality
- Dust
- Sliver
- Mean + CV%
- Running
- Piecer
- Yarn broken
- Spectrogram
- Unlock
- Foreign matter (incl. P)

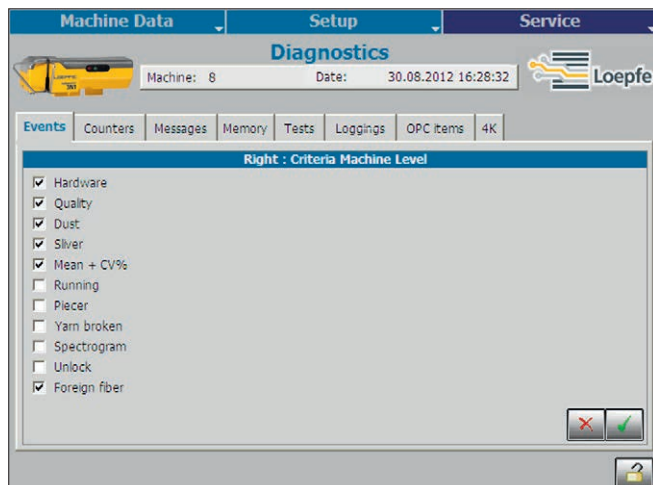


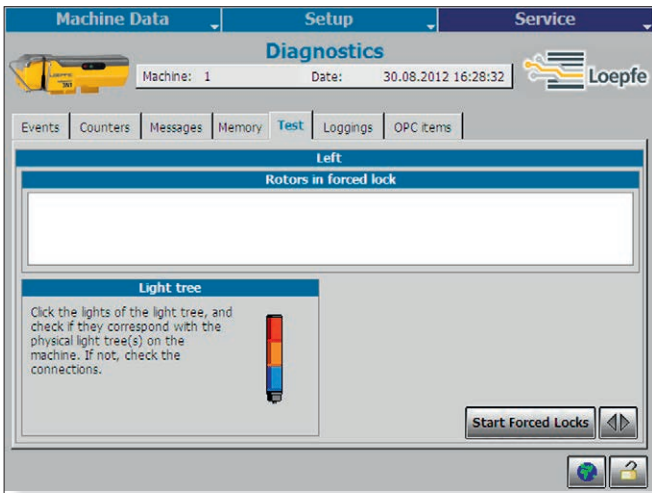

Tests

Check by testing, if each particular sensor is working. When starting the test each rotor of the chosen rotor range will go into a forced lock one by one starting with the smallest rotor number.

At the same time also the rotor position will go into red light if the interface cable between the SE and the machine section electronic is connected the right way.

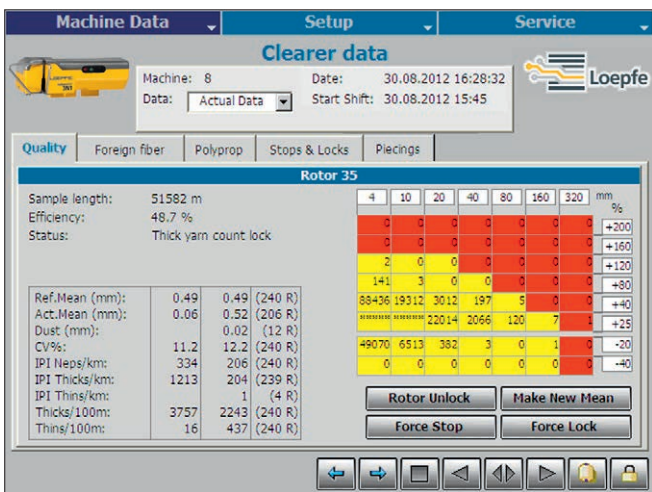

Troubleshooting

In case of troubles with one rotor position e.g. too many cuts, use the rotor clearer data for the following action:

Make new mean: New adjusting of the current yarn

Force Stop: Check for communication


Force Lock: for service purpose

Rotor Unlock: to unlock the rotor

A locked rotor must be inspected by qualified personnel.

A fault or a malfunction needs to be corrected.

After elimination, unlock the rotor.

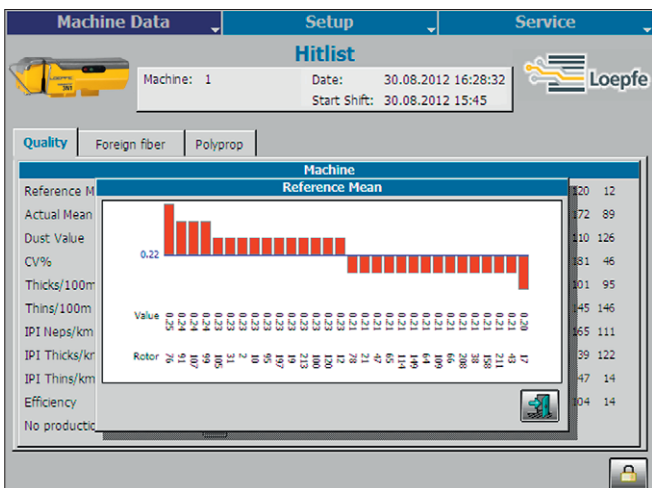

Use statistic for further analysis. Bad running sensors for Q, F and P are shown in this graph.

Hardware Locks / Recommended Action

LOEPFE 3N1 has a built-in diagnostic function. Technical problems are indicated by means of hardware locks.

Hardware locks can be cancelled by using the unlock card, from the SCU or with button on sensing head. Since hardware failures of this kind can have a severe influence on yarn quality, they should be corrected and reset by qualified personnel only. Hardware locks should therefore be assigned to unlock card 3, which should be accessible to qualified personnel only.

A hardware alarm is indicated on the Q-sensor: Both LEDs are flashing. The type of alarm can be viewed on the SCU screen.



Fault	Description	Possible cause	Recommended action
Hardware SE lock 0	Unspecified diagnostic lock after restart of SE	A lock was present before Power Down of the SE and is restored by the SCU	Correct lock situations before Power Down of SE Reset lock and check again
Hardware SE lock 1 (*)	The SH detects no Yarn signal although the rotor is in RUN state	Yarn not/not correctly in the SH measuring slit SH lower ceramic missing SH defective	Check Yarn position and guiding Replace SH
Hardware SE lock 2	Measured Yarn signal is too low	Yarn position wrong SH lower ceramic missing SH defective	Check Yarn position and guiding Replace SH
Hardware SE lock 3	Measured Yarn signal is too high	Measuring slit obstructed by dust or lint SH defective	Remove dust or lint Replace SH
Hardware SE lock 4	Too much Run/Stop transitions in the measured Yarn signal	Maximum piecing attempts reached (default 20 per shift) Yarn position wrong SH defective	Check piecing robot and spinbox components Check and correct Replace SH
Hardware SE lock 5	No communication with YM 3N1 SH	Cable unplugged or defective SH defective SE has a defective input	Connect or replace cable Replace SH Replace SE
Hardware SE lock 6	Minimum intensity signal. (F channel)	SH has no F-function SH defective	Install correct SH Replace SH
Hardware SE lock 7	Maximum intensity signal. (F channel)	Machine is producing heather yarn SH defective	Disable F-channel of YM 3N1 Replace SH
Hardware SE lock 8	Minimum intensity signal. (P channel)	SH has no P-function SH defective	Install correct SH Replace SH
Hardware SE lock 9	Maximum intensity signal. (P channel)	Machine is producing synthetic yarn SH defective	Disable P-channel of YM 3N1 Replace SH

Notes:

(*) = Function not present on stand-alone installations

SH = Sensing Head


SE = Section Electronics

SCU = Sensors Central Unit

YM 3N1 = YarnMaster 3N1

Service


Machine Configuration

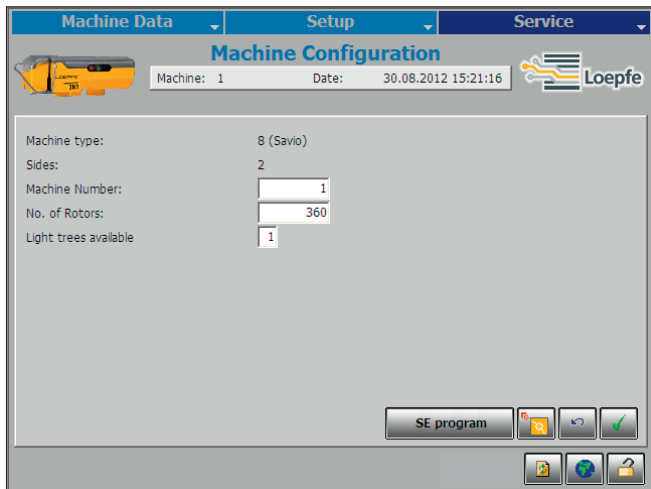

Machine type:	Defined by the used SE-software EEPROMs
Sides:	Defined by the machine type
Machine number:	Machine number defined by the customer
No. of rotors:	Total number of the machine rotors
Light trees available:	Total number of light trees of the machine
SE program:	Program the SE- Boards with the SE-software from the EEPROMs


Versions


The version is important for any support communication.

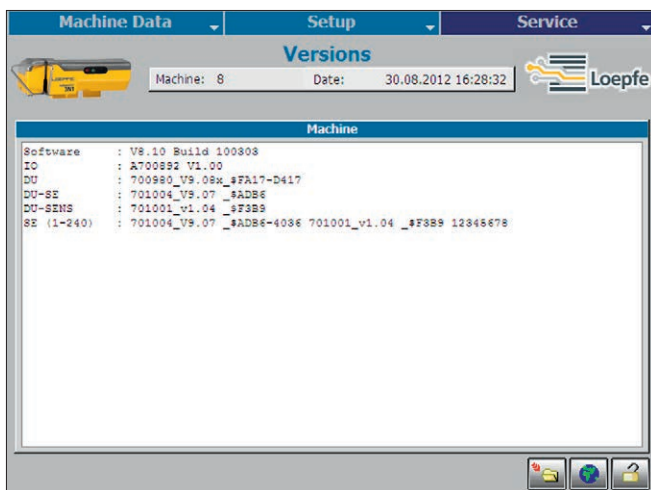

Snapshot

For any correspondence, please take a snapshot (takes about 20 minutes) and send it to Loepfe.

4. Plug in the USB-stick.
5. Wait until the camera button is added.
6. Push  to start the snapshot.

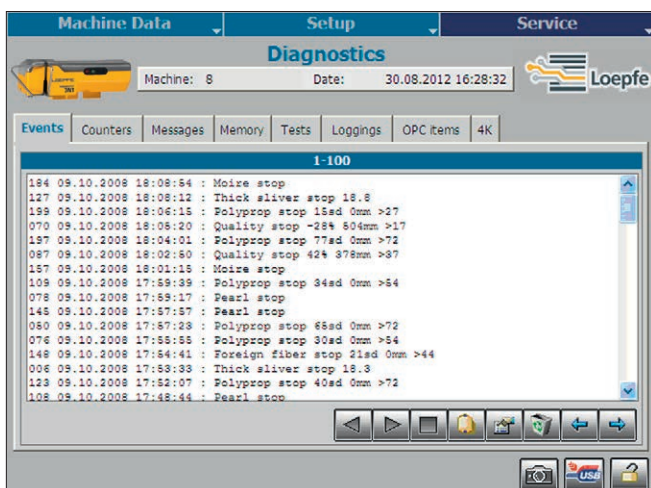

Technical Data (Changes reserved)

System

Concept	Modular, integrated in spinning System / Components individually replaceable / Power supply depends on machine type
SCU	One control station per machine / Date and time indication / Data memory in case of power failure / Bus connection to section electronic / Data connection to machine control station LAN connection to local network
Operating	Setting of the conventional clearing parameters via touch screen
Operating temperature	+0° up to +50° C
Humidity	Up to max. 95% relative humidity not condensing
Section electronic	1 Board per Section (20/24 Rotors)
Sensing head	1 Sensor per rotor
Range of application	For staple-spun yarn of natural, synthetic or blends

Central Unit (SCU)

SCU	Graphics-capable display backlit and, touch screen Keyboard and mouse connection via USB possible Microsoft® Windows CE®
Connection	All type of machine: 24V DC SELV, +25%/-15% Max. Current: 4A / Fuse: 2xT3.15AL
Capacity of OE Spinning machine	FRS3000: Up to 480 clearers can be connected
Settings/side	FRS3000: 2 different settings (each side)
Dimension	Approx. 483 x 266 x 83mm (W x H x D)
Max. power consumption	- no lamp tree is connected: 30 Watt - lamp tree with lamps of 3W is connected: 45 Watt - lamp tree with lamps of 5W is connected: 53 Watt
Weight	Approx. 5.25kg
Printing	Printout via USB stick

Evaluation Unit (Section Electronic)

SE-Board Savio	24 rotors
Spinning speed	Up to 400 m/min (Loepfe side)
Max. power supply and consumption (incl. SH)	Basic: max. 675 mA at 24V DC SELV, +25%/-15% Full: max. 750 mA at 24V DC SELV, +25%/-15% Max current: 1.1A/fuse: 1xT2AL.

Sensing Head

Basic	1 Sensor for diameter measurement integrated
Full	3 Sensor for Q/F/P measurement integrated

Yarn Count Range (Optical scanning principle)

TK Type	Limit Range Coarse	Limit Range Fine
Sensor basic/full	Nm 5	Nm 100

Parameter Settings

Settings for thick and thin places

Default values	Valid values	To disable, set to
Matrix lengths in mm		
4, 10, 20, 40, 80, 160, 320	2 to 8, 6 to 18, 12 to 38, 22 to 78, 42 to 158, 82 to 318, 162 to 840 and between the lower length + 2 mm and the higher length – 2 mm.	—
Matrix diameter deviations in %		
-40, -20, 25, 40, 80, 120, 160, 200	-26 to -50, -20 to -34, 25 to 34, 31 to 74, 46 to 114, 86 to 154, 126 to 194, 166 to 350	—
Activated matrix squares for quality stop		
Default activated matrix squares: 71, 62, 53, 44, 35, 26, 17, 07	All matrix fields can be activated, except 01, 02, 11, 12, 13, 21, 22, 23, 31, 32 and 41.	Deselect/select matrix square
Piecer classification		
Sensitivity: 70 %	50 to 100 %	0 %
Moiré		
Rotor diameter: 33 mm	20 to 70 mm	
Yarn diameter deviation: +38 %	20 to 99 %	0 %
Sliver stops		
Thin place. Length: 3m. Diameter deviation: -18 %.	1 to 9m 2 to 30 %	0m
Thick place. Length: 3m. Diameter deviation: +18 %.	1 to 9m 2 to 30 %	0m
Yarn count lock		
Disabled	Length: 10 to 1000m Deviation: 0.3 to 20 %	0m
Neps or pearl channel		
Neps with respect to the reference mean: +50 %	+5 to +170 %	0 %
Spectrogram analysis		
Maximum statistically secured wavelength: 300m	37 to 300m	0m
Spectrogram lock: 0 %	10 to 255 %	0 %
Reference spectrogram lock: 0 %	10 to 255 %	0 %
Lock functions		
Quality lock: 3 stops per 1000m	1 to 9 stops per 1000 to 16000m	0 stops
Moiré lock: 3 stops per 1000m	1 to 9 stops per 1000 to 16000m	0 stops
Sliver lock: 2 stops per 1000m (thick, thin)	1 to 9 stops per 1000 to 16000m	0 stops
Neps lock: 3 stops per 5000m	1 to 9 stops per 1000 to 16000m	0 stops
Reference mean value lock: 15 %	4 to 30 %	0 %
CV% lock: 25 % (+ and -)	4 to 50 %	0 %
Unlock priorities and groups		
Quality, moiré and sliver belong to group 1 (unlock with card 1).	Card 1 to 3	—
CV%, spectrogram locks, yarn count and reference mean locks belong to group 2 (unlock with card 2).	Card 1 to 3	—
Technical locks, such as hardware locks belong to group 3 (unlock with card 3).	Card 1 to 3	—
Unlock switch: 0 (switched off)	0,1,2	0

Settings for colored fiber detection

Default values	Valid values	To disable, set to
Matrix lengths in mm		
10, 14, 20, 24, 30, 34, 40	2 to 12, 12 to 18, 16 to 22, 22 to 28, 26 to 32, 32 to 38, 36 to 198 and between the lower length + 2 mm and the higher length – 2 mm.	—
Matrix intensity values		
4, 16, 17, 19, 21, 25, 31, 45	4 to 15, 5 to 16, 17 to 18, 18 to 20, 20 to 24, 22 to 30, 26 to 44, 32 to 99	—
Activated matrix squares for foreign matter stop		
Default activated matrix squares: 71, 62, 53, 44, 35, 26, 17	All matrix fields can be activated, except 01, 02, 03, 04, 11, 12, 13, 21, 22, 31	Deselect/select matrix square
Stops		
Cluster detection: 1	1 to 9 (1= highest sensitivity)	0
Locks		
Long cluster detection: 2	1 to 9 (1= highest sensitivity)	0
Lock: 5 stops per 5000m	1 to 9 stops per 1000 to 16000m	0m (10.4)
Unlock priorities and groups		0m
Foreign matter belongs to group 1 = unlock with card 1	Card 1 to 3	—

Settings for polypropylene detection

Default values	Valid values	To disable, set to
Matrix lengths in mm		
16, 22, 28, 34, 40, 160, 198	2 to 20, 18 to 26, 24 to 32, 30 to 38, 36 to 44, 42 to 50, 48 to 200 and between the lower length + 2 mm and the higher length – 2 mm.	—
Matrix intensity values		
5, 10, 15, 20, 25, 30, 35, 40	5 to 9, 6 to 14, 11 to 19, 16 to 24, 21 to 29, 26 to 34, 31 to 39, 36 to 99	—
Activated matrix squares for polypropylene stop		
Default activated matrix squares: 71, 62, 53, 44, 35, 26, 17	All matrix fields can be activated, except 01, 02, 03, 04, 11, 12, 13, 21, 22, 31	Deselect/select matrix square
Stops		
Cluster detection: 1	1 to 9 (1= highest sensitivity)	0
Locks		
Long cluster detection: 0	1 to 9 (1= highest sensitivity)	0
Lock: 5 stops per 5000m	1 to 9 stops per 1000 to 16000m	0 m
Unlock priorities and groups		0 m
Polypropylene belongs to group 1 = unlock with card 1.	Card 1 to 3	—



Loepfe Brothers Ltd.
8623 Wetzikon / Switzerland
Phone +41 43 488 11 11
Fax +41 43 488 11 00
info@loepfe.com
www.loepfe.com